 


Delete

In Song Writing Mode

1. Select the bar to be deleted.

In any mode except for Tempo/Level Adjusting(with the rhythm stopped).



2. Delete it.

40

With the rhythm stopped

 


Insert

In Song Writing Mode

1. Select the bar to be inserted.


In any mode except for Tempo/Level Adjusting(with the rhythm stopped)



2. Insert it.

42

 
With the rhythm stopped



Step Writing

In Step writing Mode

 
1. Select a Pattern number(location).




2. Clear the data previously written.



 3. Set the step number.(16 or 12)



 4. Select the drum voice or accent to be written.



5. Write or erase the data.

a. Writing data b. Erasing data



6. Repeat steps 4 and 5.

7. If you make any error, move the flashing dot to the error step and correct it.

In any mode except for Level Adjusting.

 


44

Tap Writing


In Tap Writing Mode

1. Select a Pattern number (location).




2. Clear the data previously written.

 With the rhythm stopped



 
3. Set the step number(16 or 12)



4. Start the rhythm.




 5. Tap-write a drum voice or accent.



6. When you make a mistake, erase all the steps of the relevant drum voice.

 With the rhythm playing



* The drum sound in each step will be erased one by one while the Enter Key is being pressed.

7. Stop the rhythm.

 


51

Copy

In Step Writing or Tap Writing Mode


1. Select the location(destination pattern) for the copied pattern(source pattern).



2. Copy the source pattern.

57

 With the rhythm stopped



Trigger In (Song Playing)

In Song Playing Mode

1. To enter or leave the Trigger In.



2. To reset the Song to the first bar.

 


60

Trigger In (Pattern Playing)

In Pattern Playing Mode


1. Select a Pattern.



2. To enter or leave the Trigger In.



 3. Change Patterns.



64