

 
System Initialization

* When you use the DR-220 for the first time, or the data in memory is accidentally erased, please initialize the system of the DR-220 as follows.

- ① Make sure that the unit is turned off.
- ② While holding the Up and the Down Keys down, turn the unit on.



While holding both keys down



Power On

* The Display will show "220" then "INT".



* The initialization is completed in about four seconds, and the Display will return to the normal indication.

STEP	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
PATTERN		●	●		●	●		●	●		●	●		●		●
SONG	MEAS			PATTERN			INSTRUMENT									
1	1			43			11									
MODE	SONG PLAY															

* Pattern Number 42 is shown on the DR-220E.

* Now, the DR-220 defaults as follows.

Tempo: 120

Voice Level: 3

Accent Level: 3

* The demonstration data is copied in memory (Song Number 1 and 2), and the preset patterns 11 to 48 are copied to the Pattern Numbers 51 to 88.